



NOTE:

Pole Configurations assume Station Class Arrestors to be used at Downs Substation. Number and elevation of Distribution and Telecom attachments may vary



Source: SCE, 2010.

Figure B.1-10
Subtransmission
Structure Dimensions